

# electro-harmonix

## CRAYON

### Full-Range Overdrive

Congratulations on your purchase of the Crayon, a colorful overdrive in a compact, pedalboard-friendly enclosure. Unlike many mid-focused overdrive pedals, the Crayon is a *full-range* overdrive with rich harmonic content and a full bodied tone allowing you to dial in the perfect overdrive for any situation. The GAIN knob ranges from just a touch of dirt to full-on distortion while individual BASS and TREBLE controls open up the frequency response capabilities of the Crayon yielding a wide range of versatile overdriven sounds.

#### - CONTROLS -

**GAIN Knob** – Controls the amount of input gain. As you turn GAIN clockwise, the overdrive ranges from just a touch of grit, in the fully counter-clockwise position, to classic distortion, in the fully clockwise setting.

**TREBLE Knob** – As you turn TREBLE clockwise, the overdrive's high end is accentuated, making your tone brighter. Turn TREBLE counter-clockwise for a darker sound.

**BASS Knob** – As you turn BASS clockwise, the low end is boosted. Turn BASS counter-clockwise to reduce low end.

**VOL Knob** – Sets the output level of the Crayon. As VOL is turned clockwise, the output volume increases.

**FOOTSWITCH and LED** – The Footswitch selects whether the Crayon is engaged or in true-bypass mode. When the effect is engaged, the LED is lit.

**INPUT Jack** – This ¼" jack is the audio input for the Crayon. The input impedance is 315kΩ.

**AMP Jack** – This ¼" jack is the audio output from the Crayon. The output impedance is 50Ω.

**9V Power Jack** – The Crayon can run off of a 9V battery or you can use an optional 9VDC AC Adapter capable of delivering at least 25mA to the 9V power jack, such as the Electro-Harmonix 9.6DC-200 power supply. The AC Adapter must have a center negative plug. The battery may be left in or taken out when using an AC Adapter. The Crayon has a current draw of 10mA at 9VDC.

## - CHANGING THE BATTERY -

To change the 9V battery, remove the four screws on the bottom of the Crayon. Once the screws are removed, take off the bottom plate to change the battery. Please do not touch the circuit board while the bottom plate is off or you risk damaging a component.

## - WARRANTY INFORMATION -

Please register online at <http://www.ehx.com/product-registration> or complete and return the enclosed warranty card within 10 days of purchase. Electro-Harmonix will repair or replace, at its discretion, a product that fails to operate due to defects in materials or workmanship for a period of one year from date of purchase. This applies only to original purchasers who have bought their product from an authorized Electro-Harmonix retailer. Repaired or replaced units will then be warranted for the unexpired portion of the original warranty term.

If you should need to return your unit for service within the warranty period, please contact the appropriate office listed below. Customers outside the regions listed below, please contact EHX Customer Service for information on warranty repairs at [info@ehx.com](mailto:info@ehx.com) or +1-718-937-8300. USA and Canadian customers: please obtain a **Return Authorization Number (RA#)** from EHX Customer Service before returning your product. Include—with your returned unit—a written description of the problem as well as your name, address, telephone number, e-mail address, RA# and a copy of your receipt clearly showing the purchase date.

### **United States & Canada**

EHX CUSTOMER SERVICE  
ELECTRO-HARMONIX  
c/o NEW SENSOR CORP.  
55-01 2ND STREET  
LONG ISLAND CITY, NY 11101

Tel: 718-937-8300  
Email: [info@ehx.com](mailto:info@ehx.com)

### **Europe**

JOHN WILLIAMS  
ELECTRO-HARMONIX UK  
13 CWMDONKIN TERRACE  
SWANSEA SA2 0RQ  
UNITED KINGDOM

Tel: +44 179 247 3258  
Email: [electroharmonixuk@virginmedia.com](mailto:electroharmonixuk@virginmedia.com)

To hear demos on all EHX pedals visit us on the web at **[www.ehx.com](http://www.ehx.com)**  
Email us at **[info@ehx.com](mailto:info@ehx.com)**