 




CCT-1 Chromatic Clip-on Tuner

 
Item ref: 173.262UK

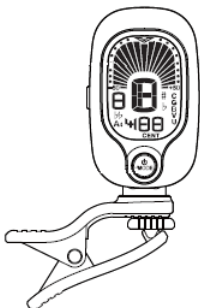


User Manual

Features

- Auto power-off function: The device will turn off automatically if there is no signal present or operation in 5 minutes.
- Tuning modes: Chromatic, Guitar, Bass, Violin, Ukulele C, Ukulele D.
- Settings saved upon powering off.
- Backlit LCD display

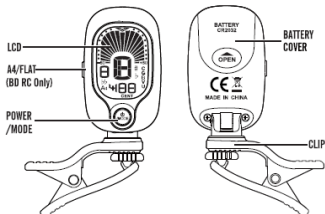

 When the battery charge is low, the LCD will become dim. Please replace the battery as soon as possible.

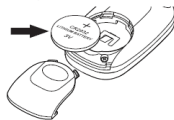

NOTE: 1. Pay attention to polarity when replacing battery.

2. Remove the battery if the product will not be used for a long period.

Operation

1. Press **POWER/MODE** for 2 seconds to turn on/off. The CCT-1 will turn on to the last setting. The default tuning mode is Chromatic when first powering this tuner.
2. Press **A4/FLAT** briefly to set A4: 430-450Hz.
3. Press **A4/FLAT** for 2 seconds to set flat tuning.
4. Press **POWER/MODE** briefly to set mode: C (Chromatic), G (Guitar), B (Bass), V (Violin), U-C (Ukulele C), U-D (Ukulele D).

Specifications

Battery	3V (1 x CR2032 included)
Measuring range	27.5Hz - 4186Hz (A0 - C8)
Accuracy	±1%
Dimensions	33 x 49 x 40mm
Weight	36g

Errors and omissions excepted.
Copyright© 2015. AVSL Group Ltd.